


What you can see on the screen:

1. Basic display

The default setting displays actual airflow, pressure and alarm (if activated).

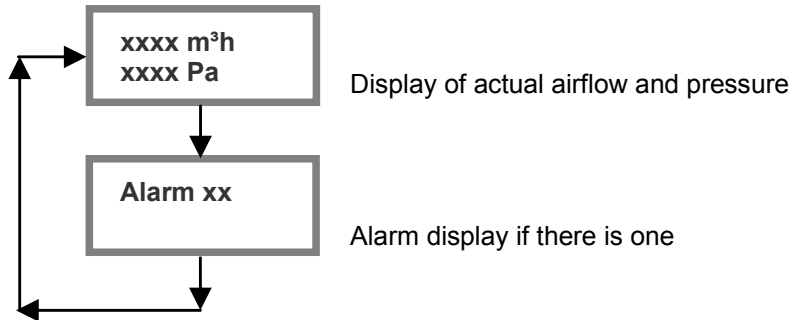

2. Display all the parameters

By pressing knobs ↑ and ↓ you can activate display the status of all the parameters :

